






Balcony version bracket Installation Instructions

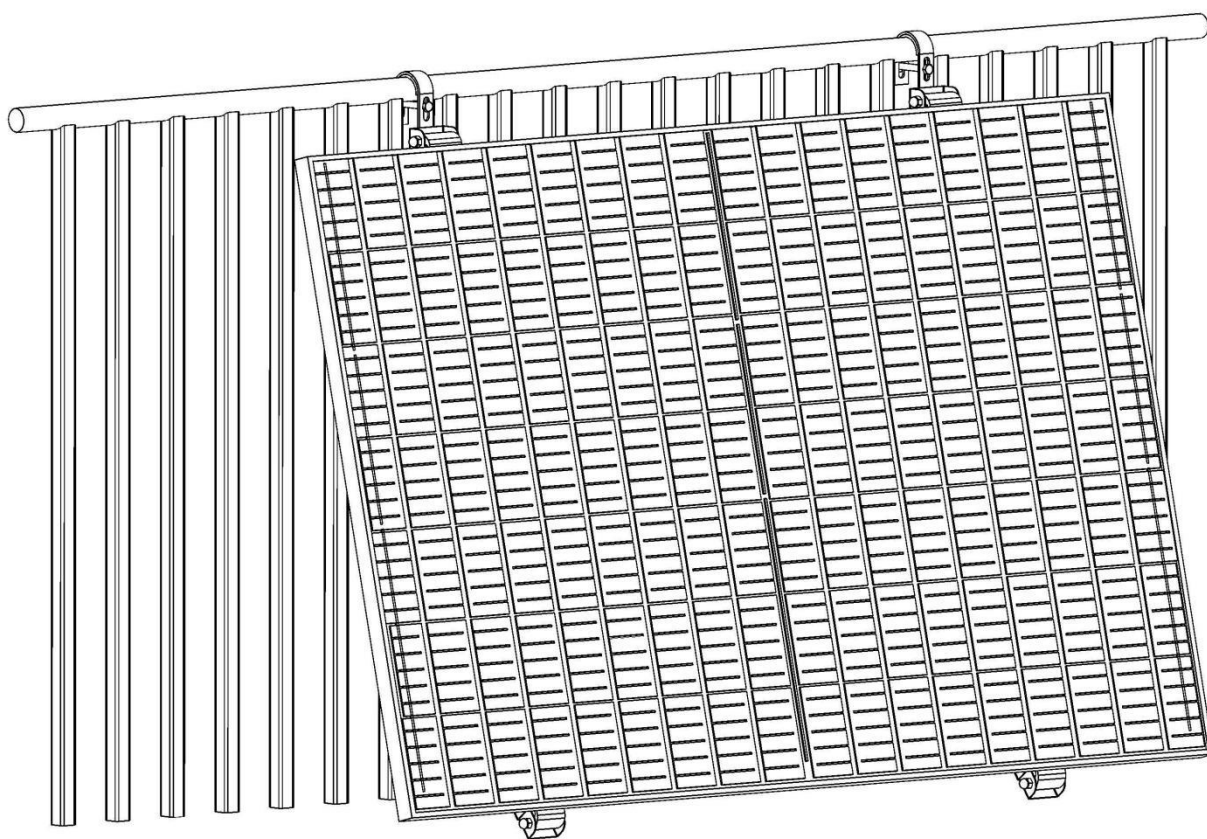


Balcony Tripod support structure

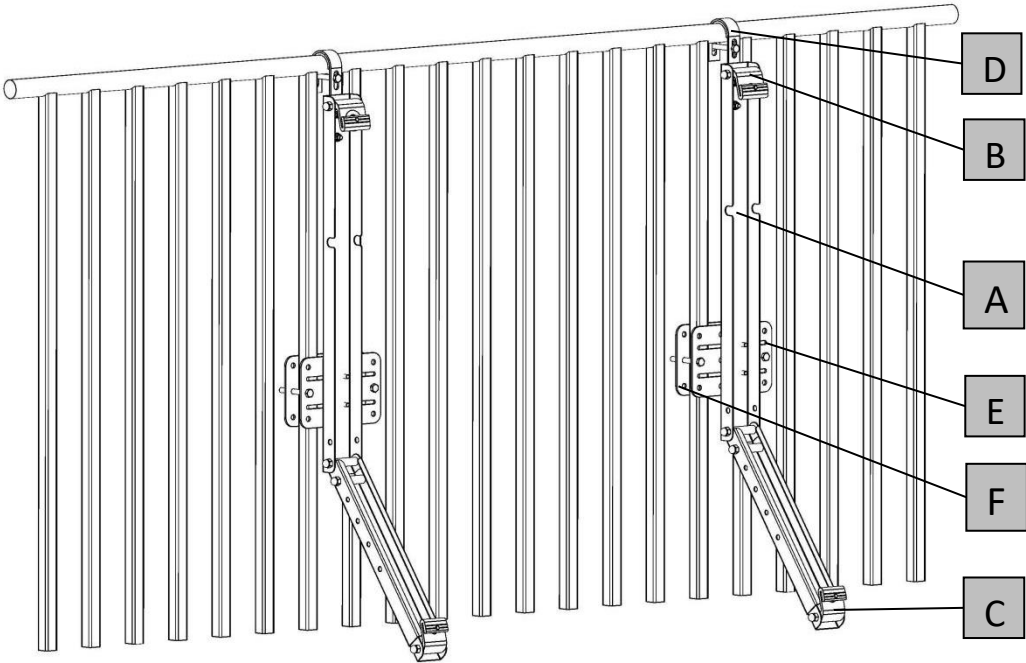


A

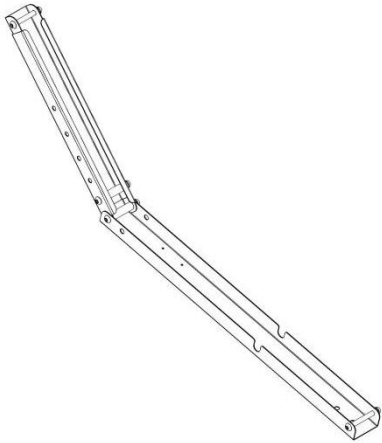


B

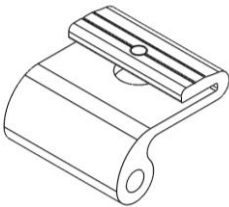


C

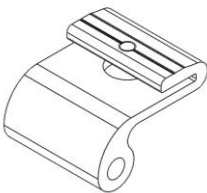


D

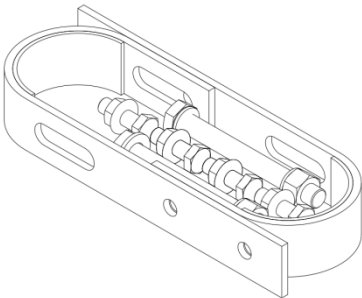

E

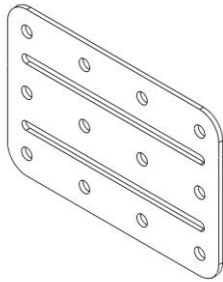

F

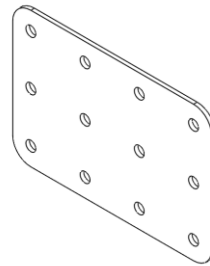


+



M8




17mm




Installation Steps

1.Connect the Panel clamp to the panel.


Note: The 70-millimeter ones are on the same side, and the 60-millimeter ones are also on the same side.

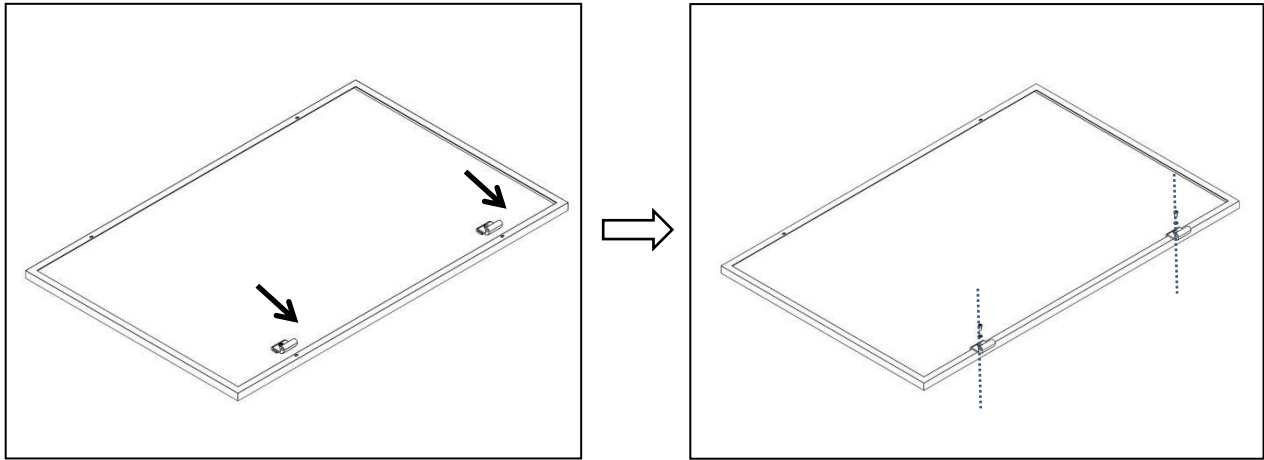

On the other side, the support shafts and photovoltaic panels were also installed in sequence.


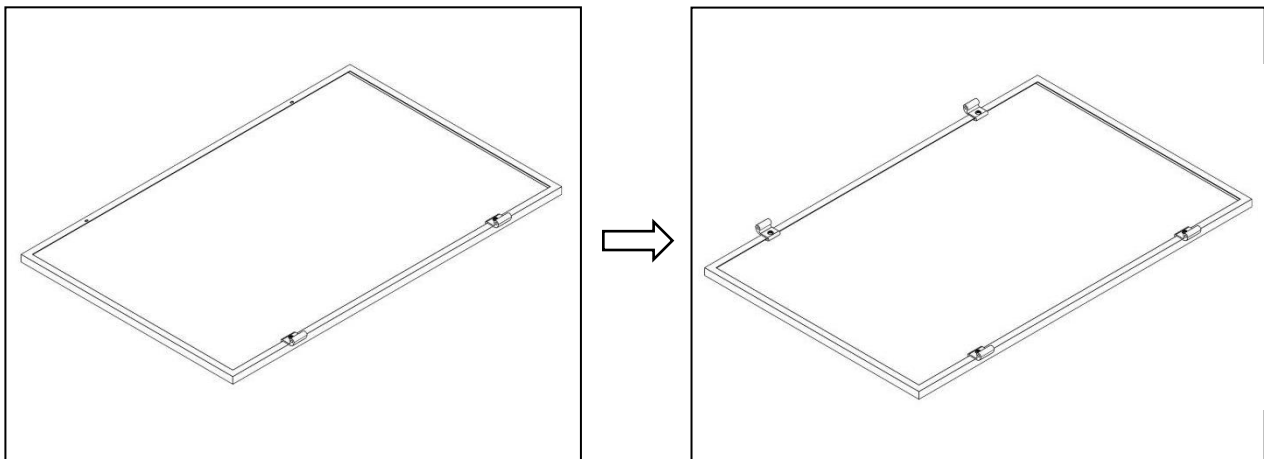


2.Loosen the bolts of the support, adjust the hole position according to the desired angle, and then tighten the bolts.


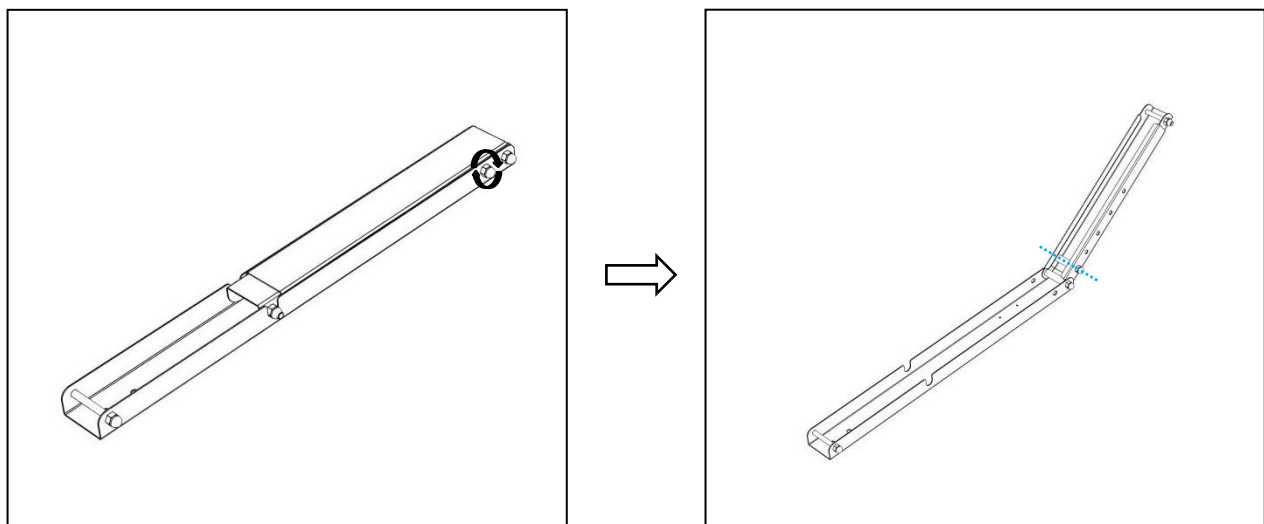


3.Connect the Panel clamp on the support



Note: The longer 70mm side is connected to the base of the tripod, using bolts M10*85.
The shorter 60mm side is connected to the inner sleeve of the tripod, using bolts M10*75.

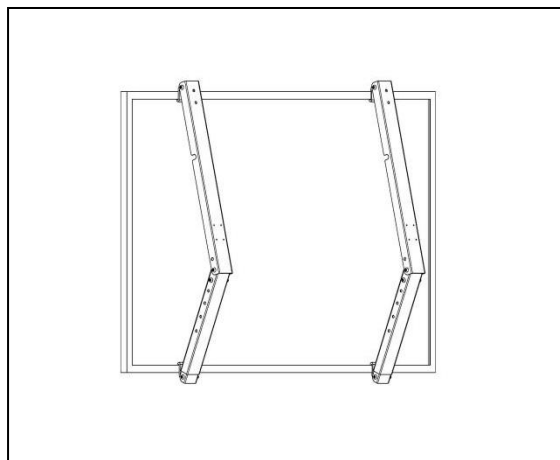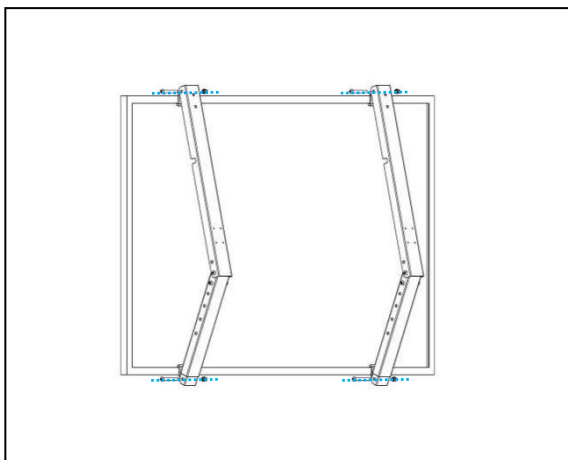



4.Connect the hook on the support

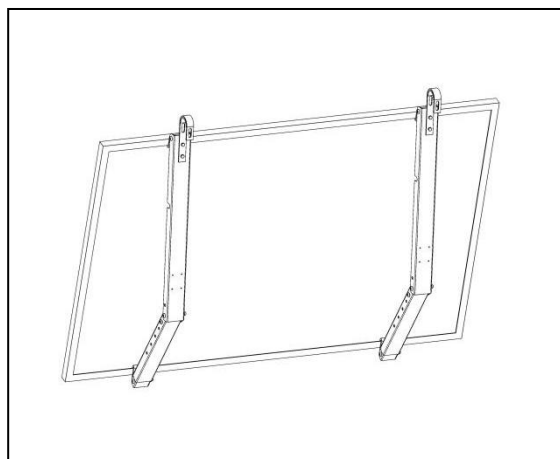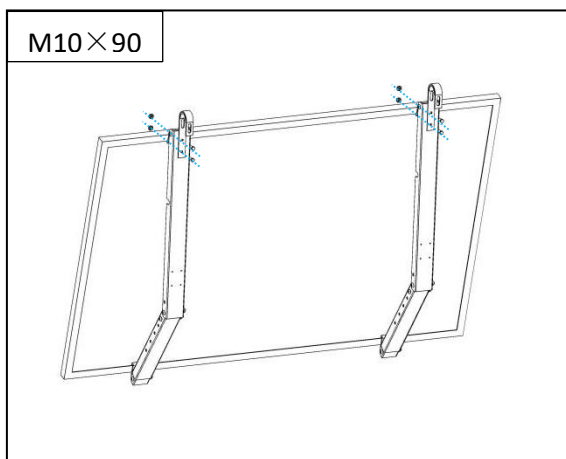


5.Connect the fixed plate A on the support.

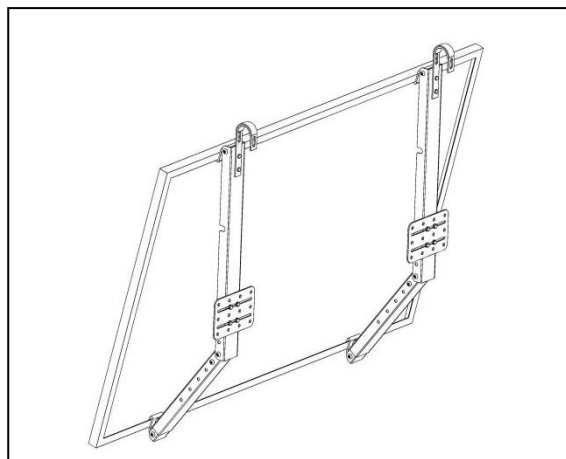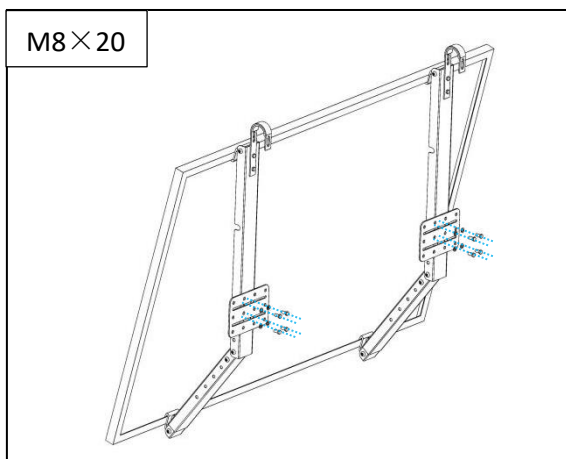


6. Hang the support as a whole on the railing and tighten the bolts of hook.

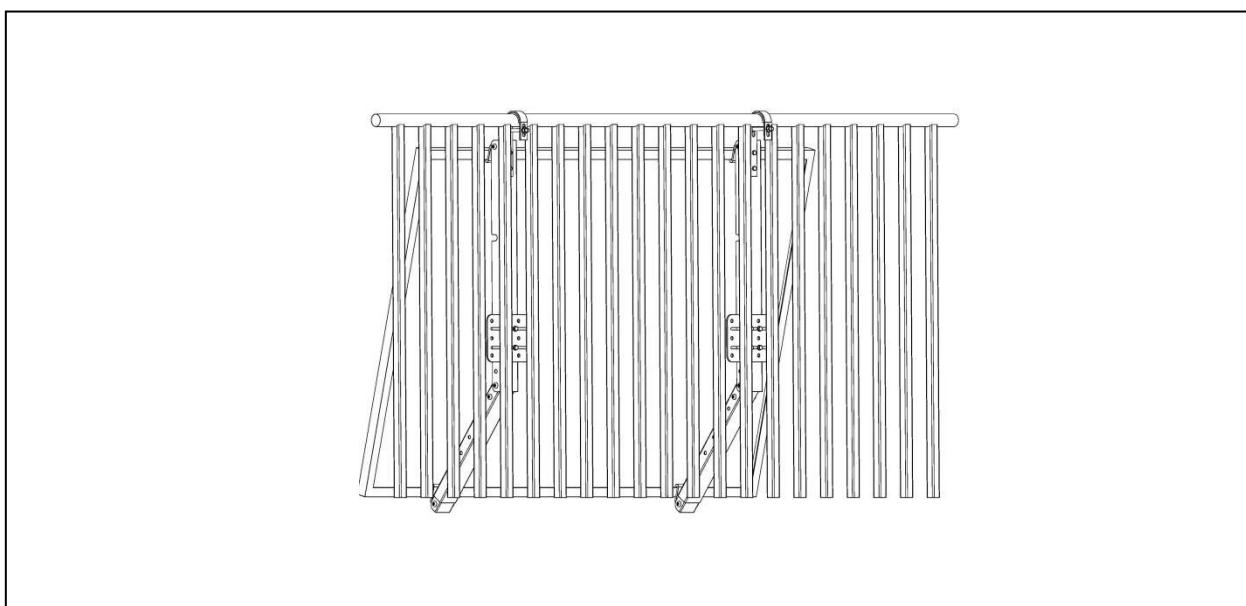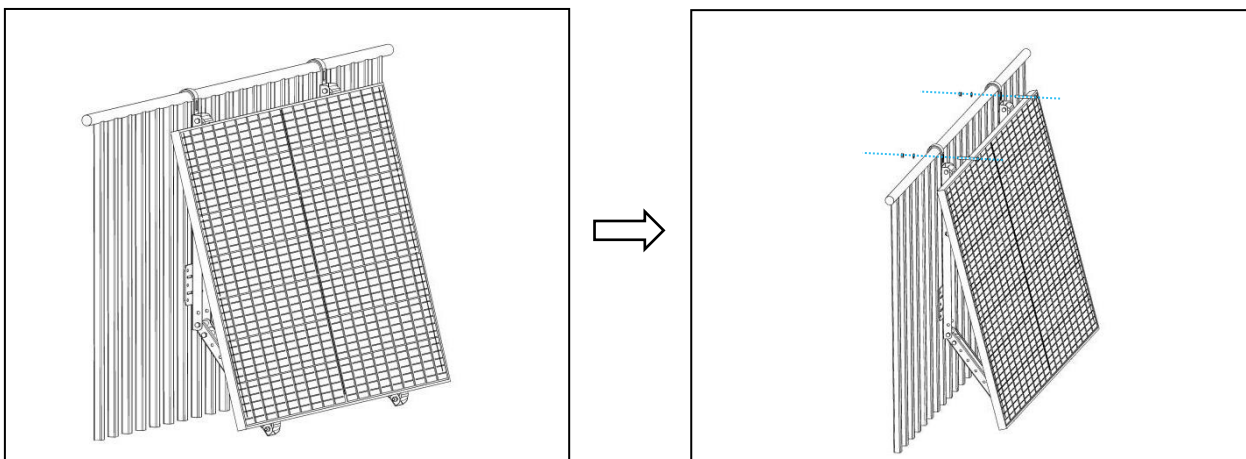







7. Connect fixed plate B and fixed pressure plate A, adjust to the appropriate distance, and then tighten the bolts.

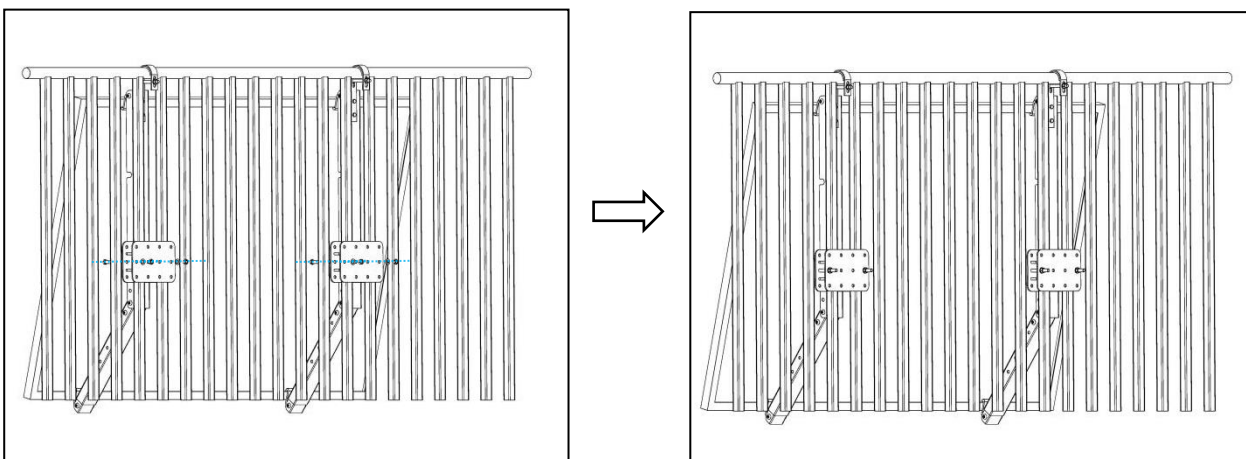

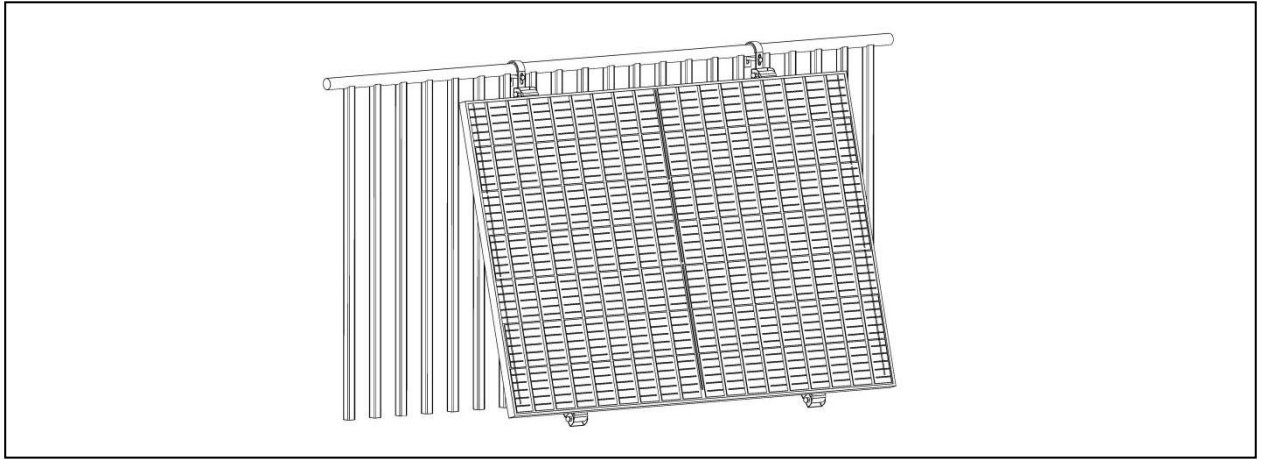

Last, You can add steel wire rope, one end tied to the solar panel, the other end tied to the railing, to reinforce the device and prevent the solar from falling.

Components

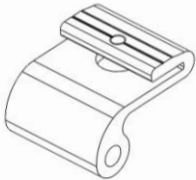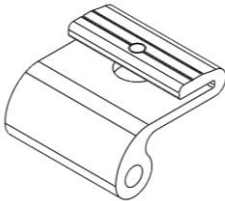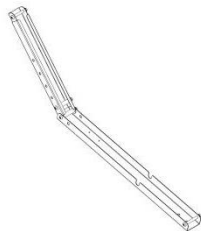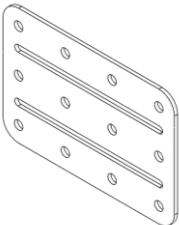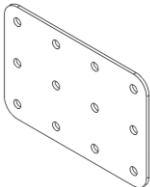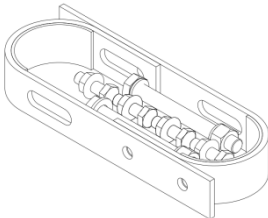Component Name	Panel clamp L=60	Panel clamp L=70	Support-Balcony version
Part Number	H-H190-0060	H-H190-0070	H-TRB-AFK-AF25
Picture			
Component Name	Fixed plate A	Fixed plate B	Hook set
Part Number	H-M272-0220	H-M273-0220	H-AC-HOK01
Picture			

NOVA

XIAMENHOPERGYPHOTOVOLTAICTECHNOLOGYCO. LTD.

Address: No. 686, Houdi Rd, Neicuo Town, Xiang'an district, Xiamen City, China

Phone :+86-592-5689685 Fax : 86-592-5638096

Mail : info@hopergy.com

Web:www.hopergy.com